


## Notes to Installer:

This pump pulls water in by suction. The inlet plumbing must offer a very free flow, like a drain pipe in reverse. The pump will be very noisy if intake is restricted or blocked by air pockets or being undersized.

Low voltage systems require larger wire than 115v. See Conergy Universal Wire Sizing Chart for assistance.

Failure to install a fuse or breaker equal or less than the motor's Max Amp rating will void your warranty.

The manual contains important maintenance information, and is the property of the pump owner. Please give it to them when you are finished!

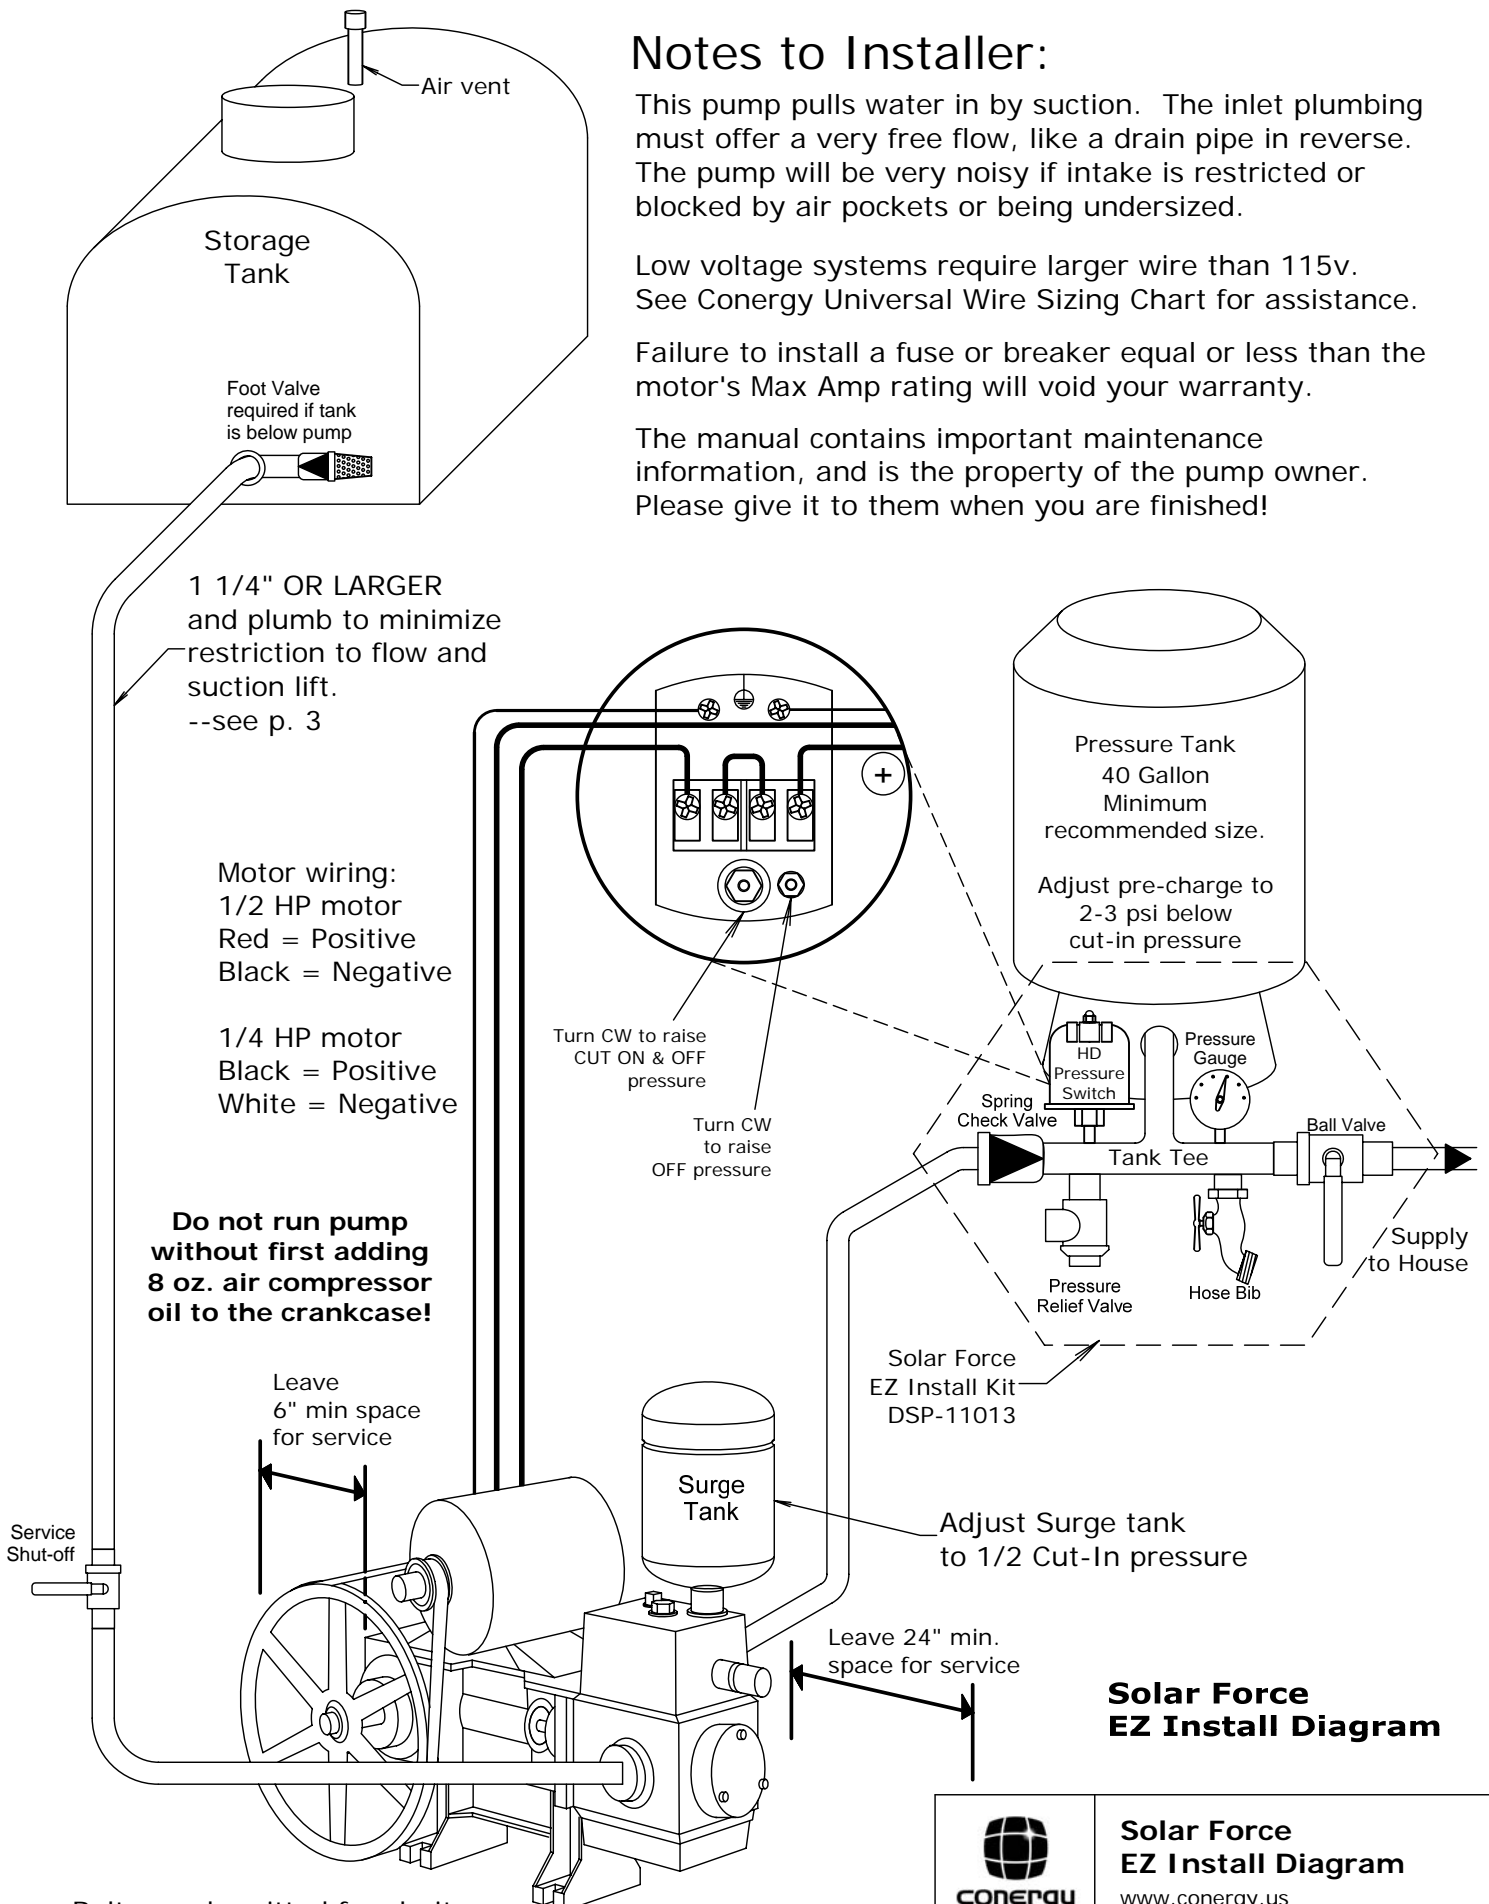

Belt guard omitted for clarity.  
**DO NOT OPERATE WITHOUT GUARD IN PLACE!**



**Solar Force  
EZ Install Diagram**

www.conergy.us

5/2005

R 2.0

© Copyright Conergy 2005